

# MANUAL CRAZY LIGHT

## HOW TO PLAY

1. Insert coin or bill.
2. Press START button and wait for the buttons to illuminate.
3. Press lit buttons until time runs out.
4. Watch your score on the display.
5. Collect your tickets. **Notice:** ticket dispensers are optional.

## SETTINGS

### How to access and browse through settings menu

1. Turn ON the machine and wait for normal operation mode.
2. Open machine and locate main board.
3. Press UP to enter settings menu. Use UP and DOWN to browse the menu.
4. Use ENT to enable value changing mode. Use UP and DOWN to adjust value. When done us ENT to save changed value.
4. Close machine and use buttons on the top of it.

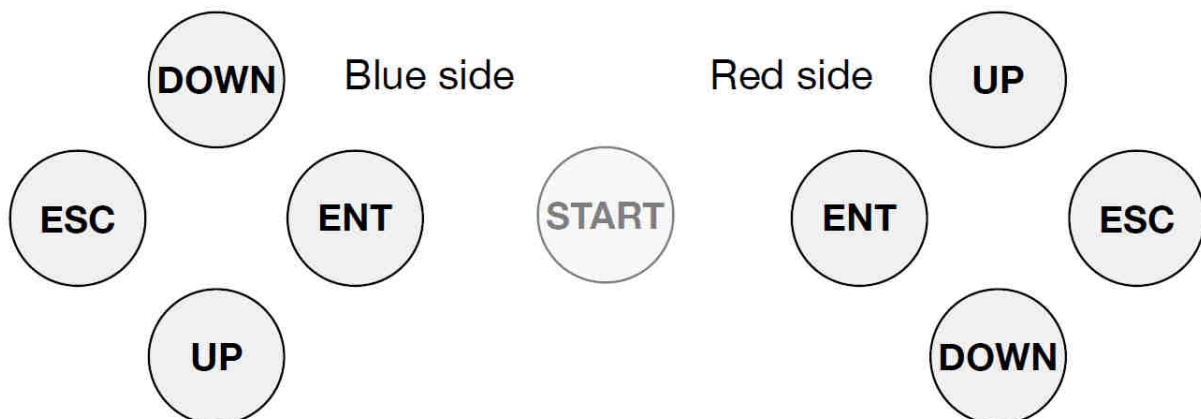


Table with settings:

2	Game counter
4	Dispensed tickets counter
21 CAC	Coin acceptor type (serial/parallel)
23 PL1	Credits quantity for one pulse on first channel of coin acceptor
24 PL2	Credits quantity for one pulse on second channel of coin acceptor (if used)
25 PL3	Credits quantity for one pulse on third channel of coin acceptor (if used)
26 PL4	Credits quantity for one pulse from bill acceptor
41 VPL	Machine volume
43 LoD	Button lit time
44 NoL	Lit buttons at one time limit
45 GAT	Game time in seconds
46 FrE	Free play mode
61 tDt	Ticket dispenser mode (continuous /pulse)
62 T 1	Tickets for winner *
63 T 0	Tickets for loser *
64 PT1	Extra tickets - first stage point threshold **
65 nT1	Extra tickets - first stage ticket quantity **
66 PT2	Extra tickets - second stage point threshold **
67 nT2	Extra tickets - second stage ticket quantity **
68 PT3	Extra tickets - third stage point threshold **
69 nT3	Extra tickets - third stage ticket quantity **
70 PT4	Extra tickets - fourth stage point threshold **
71 nT4	Extra tickets - fourth stage ticket quantity **
81 CrE	Clear active credits
82	Restore default score (record)
83 dFL	Restore default settings

\* - Set ticket quantity that winner and loser will get when the game is over.

\*\* - Set point threshold and ticket quantity to reward players for reaching high scores.

## How to exit settings and apply changes

All values are stored immediately after making any changes. You don't have to reboot the machine in order to apply changes.

Browse through the menu using UP and DOWN buttons. To exit the menu press ESC or restart the machine.

## How to read counters

Counters can display large numbers (up to 6 digits) and are using both scores displays. For example:

when reading tickets counter, you'll see:

- **002** on the left display
- **491** on the right display

It means that the machine gave **2.491** tickets. Number on the credit display is just an order number of this settings menu position and it's not relevant to the counter value.